


# FREELANDER 2 2013-14


## LAND ROVER ORIGINAL TRAILER ELECTRICS CABLE FROM BUILT-IN SOCKET TO TWIN TRAILER SOCKETS

TRACED AND DRAWN BY K. WILSON NOV 22

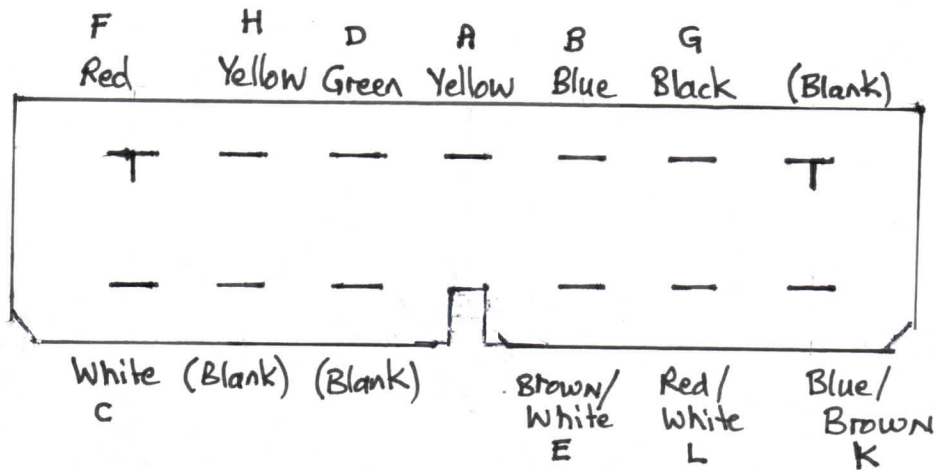


Looking at socket on end of cable to twin sockets

### SUPPLEMENTARY (TYPE 12S)

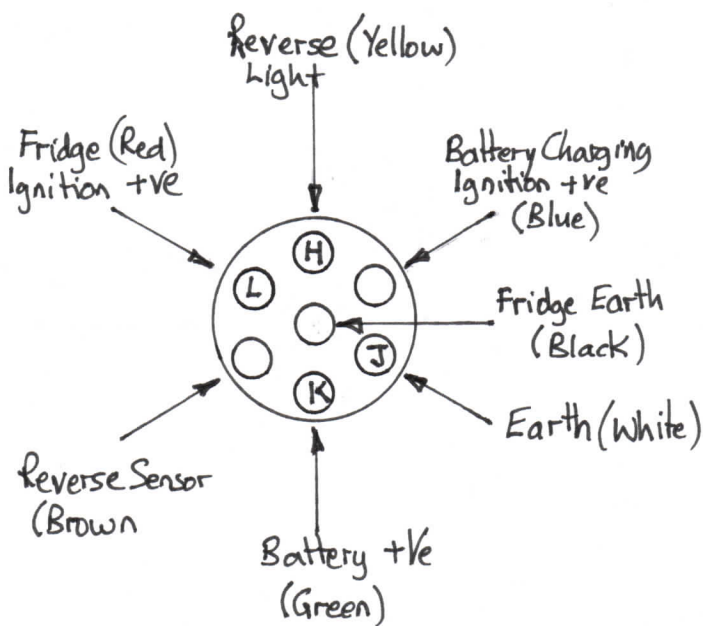

Looking at socket from rear of car

### MAIN SOCKET (TYPE 12N)

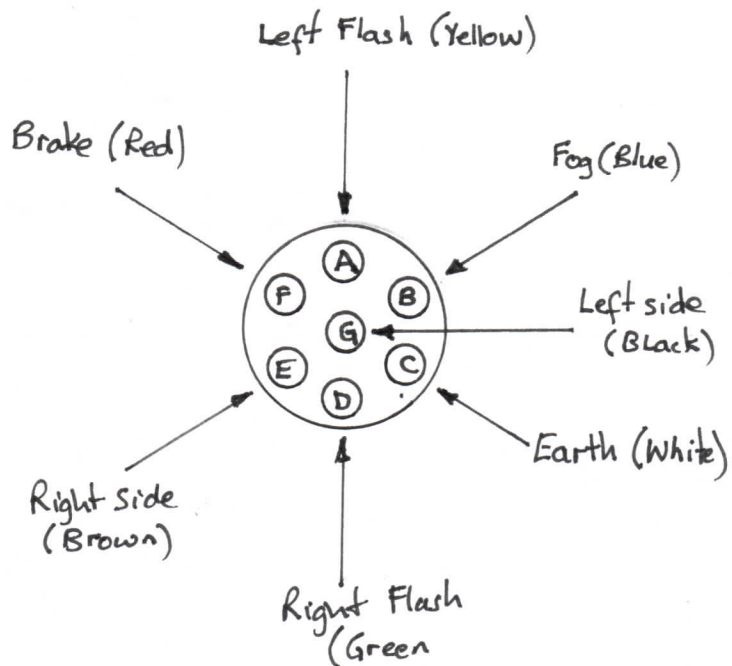

Looking at Socket from rear of car